


How to Install Spring Steel Clips with a Lagmaster and Installation Tool

Lagmaster Plus has plug-in adapters for Ramset's™ J-Master tool, Caddy's™ VAFT tool, and our own installation tools.

Simply plug in the stud attach the tool and adjust the telescoping pole to the correct length to install pre-wrapped wire and clip assemblies to open web bar joists and Z-purlins.

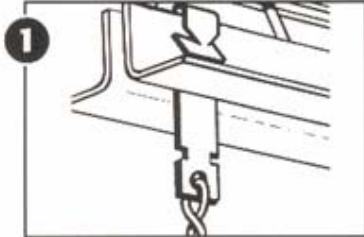

1 Plug in the proper Lagmaster Plus stud and secure the tool to the stud. Attach the pre-wrapped wire and clip assembly. Then insert the clip into the void between the two base angles. Position the clip over the vertical flange and pull down to set the spring clip. Disengage the tool.



2 Z-purlin pre-wrapped wire and clip assemblies are installed over the 45 - degree flange making certain that the clip is pulled down securely to set the clip. Disengage the tool.

