





## How to replace Part #: LM STUD on Lagmaster®, Lagmaster® Plus, ChuckExtender™ & PurlinMaster® pole tools.

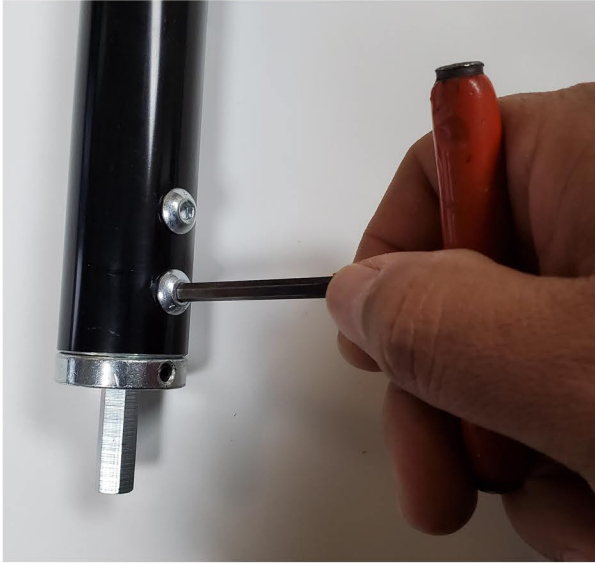

**Step. 1**  
Remove the 1/4-28" button head Allen bolt located next to the black set screw visible on the outside of the LM DRIVER using a 5/32" Allen wrench.

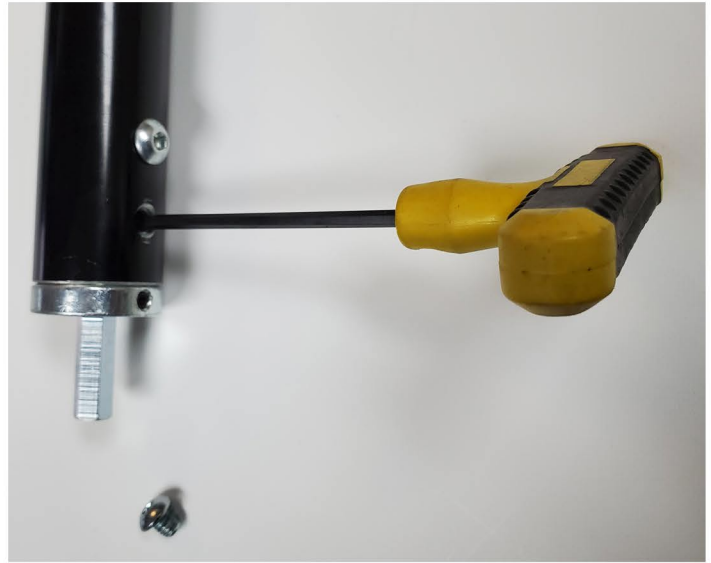

**Step. 2**  
Remove the black set screw located behind the 1/4-28" button head Allen bolt using a 1/8" Allen wrench.



**Step. 3**  
Remove the smaller black set screw using a 3/32" Allen wrench.



**Step. 4**  
Remove the LM-STUD from the LM DRIVER. If the LM-STUD is difficult to remove, use a pair of pliers to coax it out with a back and forth twisting motion.

© 2020 Doc's Industries, Inc. All Rights Reserved